


FACE STYLES

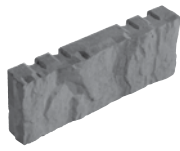

ASHLAR TANDEM



LAFITT TANDEM




LAMINA TANDEM



MELVILLE TANDEM

RETAINING WALL

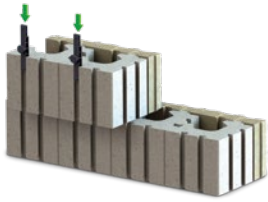

STEP 1 - Slide the universal connector as follow (one connector per unit)




STEP 2 - Exceed the lower part of the connector with the units underneath




STEP 3 - Push the units forward until they lock

FREESTANDING WALL

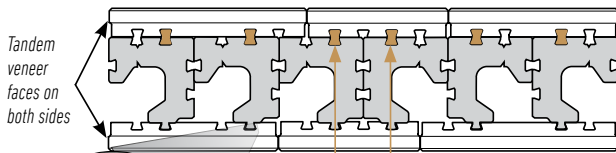

Tenon and mortise on one side


Place connectors in channels to secure veneer to modular block, two per veneer

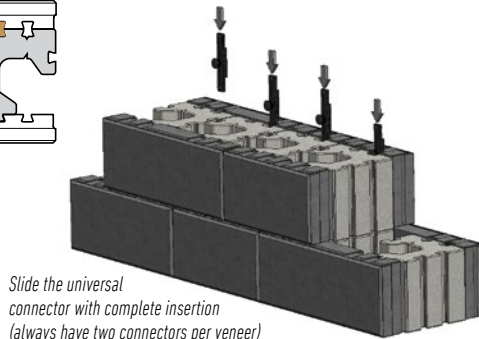


Slide the universal connector with complete insertion (always have two connectors per veneer)

REINFORCING WALLS

Install an additional structural unit by sliding the vertical tenon (male side) in the mortise (female side)

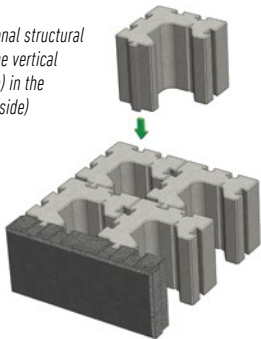



Easily install additional structural units to reinforce the corner

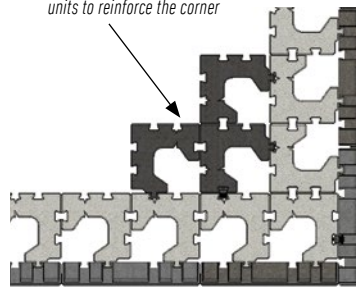

Check with your local Belgard Representative for product availability and color options.

TANDEM™ MODULAR BLOCK

INNOVATIVE, VERSATILE SYSTEM PROVIDES THE APPEARANCE OF NATURAL STONE THAT COMPLEMENTS ANY HARDSCAPE

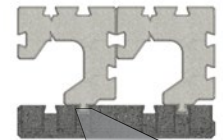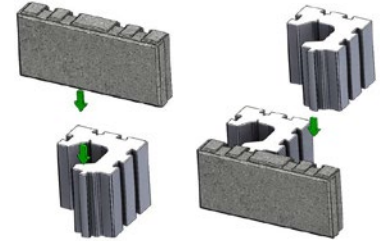

Tenon and mortise

FEATURES & BENEFITS

- Four different veneer face styles
- Design flexibility
- Better stability during installation
- Limited job site space solution
- Connecting multiple blocks together to reinforce to make a higher wall without geogrid
- Easily construct reinforced corners by connecting multiple blocks
- One all-purpose plastic connector; retaining wall, double faced wall, setback wall, corners, curved wall and columns

SHAPES & SIZES

MODULAR BLOCK



7 $\frac{1}{16}$ x 7 $\frac{7}{8}$ x 7 $\frac{7}{8}$

UNIVERSAL CONNECTOR



5 $\frac{3}{4}$ x 1 $\frac{1}{4}$ x $\frac{3}{8}$