



STEP 2: LAY THE NEXT COURSE OF BLOCK. MAKE A MARK ON THE BACK OF THE BLOCKS IN THE AREAS THAT ARE NOT REINFORCED. BACKFILL AND COMPACT THAT COURSE.

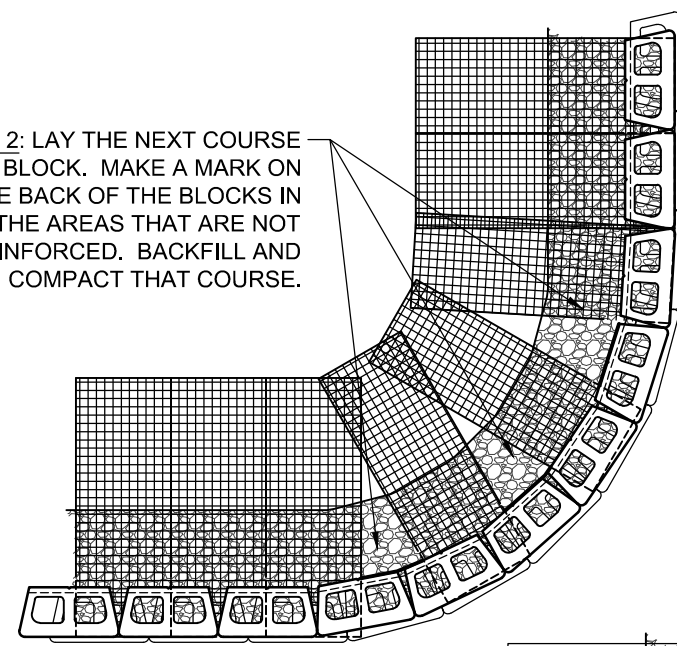

STEP 3: PLACE REINFORCEMENT IN THE AREAS WHERE THE MARKS SHOW GAPS IN THE LOWER REINFORCEMENT PATTERN. CONTINUE NORMAL WALL CONSTRUCTION, REPEATING THESE STEPS AS NEEDED.

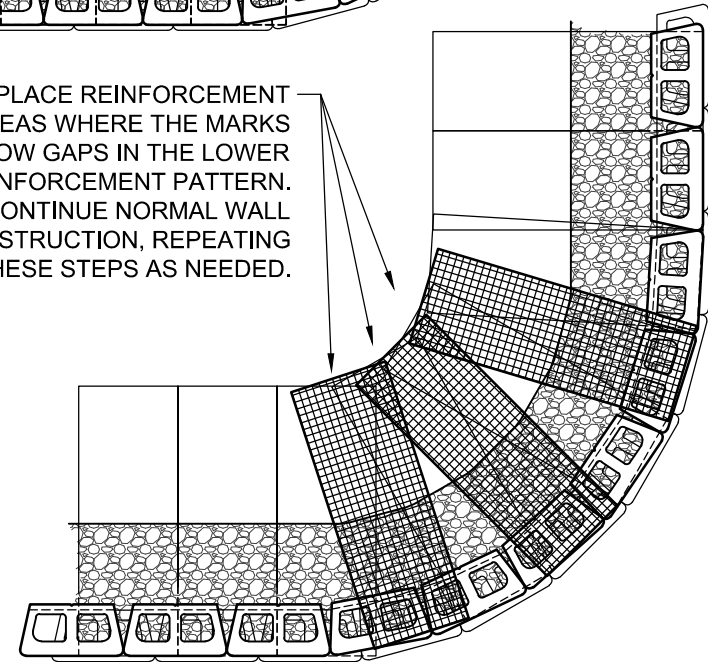

MINIMUM RADIUS 4 FT. TO FACE



This drawing is for illustrative purposes only and should not be used for construction without the signature of a registered professional engineer.
 www.anchordiamond.com
 © 2023 ANCHOR Engineering, LLC®
 and © 2023 ANCHOR DIAMOND Group. All rights reserved

Diamond Pro 9D Retaining Wall System

Outside Curves

Scale:	None	Drawn by:	DA
Date:	10/2/23	Drawing number:	DP9D27